


To change the battery: Slide the cover off the battery compartment. Note the polarity markings inside the compartment. Use only 9 V alkaline batteries, IEC type L6F22, e.g. UCAR 522 or MN-1604. A battery should last for about 30 hours of normal operation.

Store the stethoscope at normal room temperature. Remove the battery before storing the instrument for a long period of time. Battery leakage can destroy it.

The indicator lamp lights up when the stethoscope is switched on. Reduce the volume before touching the probe tip against the object.

The probe tips should be attached by hand. Do not use tools.

The spiral cable for connecting earphones or tape recorder is supplied complete with 6-pole Modular Telephone connectors and has the ordering no. CAB-10. If a different connector type is required for the tape recorder, it must be attached to the **second** and the **fifth** wire (see fig.).

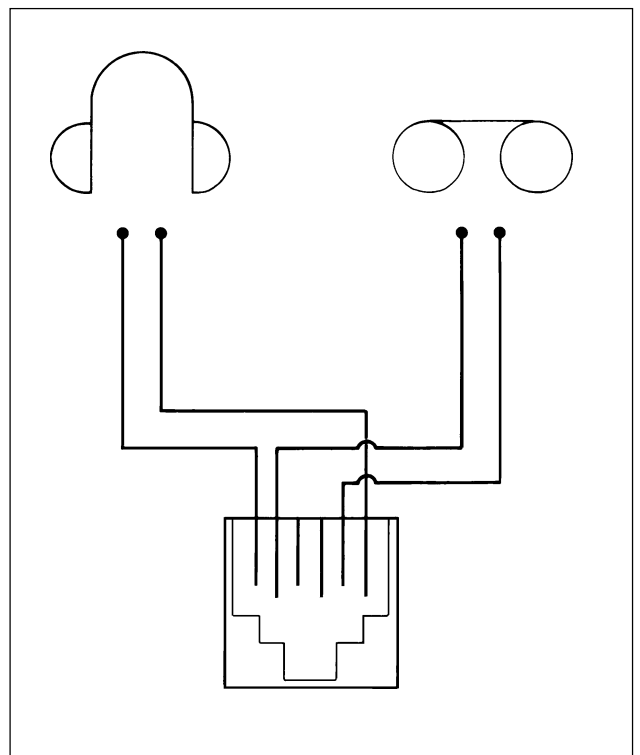

Technical Data:

| | |
|-------------------------|-----------------------------------|
| Casing | Splash proof ABS moulding |
| Nominal battery voltage | 9 V |
| Temperature range | 0° to + 55° C |
| Weight | 300 grams incl. battery and probe |
| Dimensions | 205 x 50 x 40 mm |

